

**PROBLEM SYMPTOMS TABLE**

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	2. Starter 3. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. ECM power source circuit 2. Fuel pump control circuit 3. ECM	DI-285 DI-289 IN-28
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-289
Engine cranks normally (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-282 DI-289 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-282 DI-289
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-282 DI-289
High engine idle speed (Poor idling)	1. ECM power source circuit	DI-285
Low engine idle speed (Poor idling)	1. Fuel pump control circuit	DI-289
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-289
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-285 DI-289
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-289 DI-315
Surging (Poor driveability)	1. Fuel pump control circuit	DI-289
Soon after starting (Engine stall)	1. Fuel pump control circuit	DI-289
During A/C operation (Engine stall)	1. ECM	IN-28