

The **REAL** Step 1: Remove the factory "skid plate" from the transfer case.



Installation Instructions for Transfer Case Skid Plate, Tacoma-RSP for 1995-2003 Toyota Tacoma

Thank you for purchasing your new Skid Row transfer case skid plate. It is designed to give you peace of mind while traversing even the toughest trails.

Your skid plate package should come complete with the following parts:

1. (1) Transfer Case Skid Plate
2. (4) 3/8-16 UNC x .75" Self-Tapping Hex Head Bolts
3. (2) 3/8-16 UNC x 2.5" Carriage Head Bolt
4. (2) 3/8-16 UNC Hex Nut
5. (2) 3/8" Lock Washers
6. (2) 3/8 Flat Washers


Step 1: Lift the new transfer case skid plate into place as shown to the right. There should be existing holes in the chassis cross-member at location 2 indicated by the arrow. You may want to use a floor jack to hold the skid plate in position.

Step 2: Install two 3/8-16 UNC x 2.5" carriage head bolts, lock washers, and nuts into the holes indicated by the arrow 2. Center the skid plate on the chassis and tighten the bolts.

Step 3: Drill four 5/16" holes into the chassis using the holes in the skid plate as a guide in the areas indicated by arrows 1 & 3.

Step 4: Install the four 3/8-16 UNC x .75" self-tapping hex head bolts.

Step 7: You're ready to hit the trail!

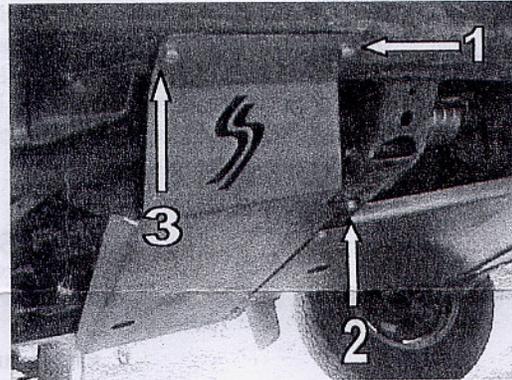

From one off-road enthusiast to another I hope you enjoy your Skid Row transfer case skid plate!

Sincerely,

Eric Kootte

President, Skid Row Automotive, Inc.